

Main wiring diagram – Cabriolet 1985, 1986


page 1 of 5

Description	Current Track	Description	Current Track	Wire Connectors
Alternator	1.2	Ignition coil	12	T1 — single, engine compartment
Alternator warning light	39	Ignition distributor	11-13	T1a — single, on battery (+)
Auxiliary air regulator	21	Ignition/starter switch	27-29	T1b — single, behind fuse/relay plate
Back-up light, left	115	Interior light, front	49	T1c — single, behind dashboard
Back-up light, right	114	Instrument panel light	67, 68	T1d — single, behind dashboard
Back-up light switch	115	Instrument panel light switch/dimmer	70	T1e — single, behind fuse/relay panel
Battery	4			T1g — single, behind fuse/relay panel
Brake light, left	100	License plate light	74-75	T1h — single, engine compartment, left
Brake light, right	99	Light switch	64-70	T1i — single, behind dashboard
Brake light switch	98, 99	Luggage compartment light	48	T1k — single, next to battery
Brake system warning switch	57	Luggage compartment light switch	48	T2 — double, behind dashboard
C.A.T. warning light	45			T2a — double, behind dashboard
Cigarette lighter	73	Oil pressure switch	34	T2b — double, behind fuse/relay panel
Cigarette lighter light	70	Oil pressure warning light	36	T2c — double, engine compartment, left
Clock light	69	OXS/AFC-system control unit	14-18	T2d — double, behind dashboard
Cold starting valve	25	OXS elapsed mileage odometer	46	T2e — double, engine compartment, left
Common ground connector	21-23	OXS frequency valve*	18	T2f — double, luggage compartment, left
Control pressure regulator	20	OXS thermostwitch*	15	T2g — double, next to dual horn
Coolant indicator control unit	111, 112	Oxygen sensor*	16	T2h — double, next to dual horn
Coolant low level warning switch	112			T3 — three-point, behind fuse/relay panel
Coolant temperature gauge	42	Parking light, left	86	T4 — four-point, behind dashboard
Coolant temperature sending unit	59	Parking light, right	83	T4a — four-point, engine compartment
Coolant temperature warning light (overheating red)	44	Parking brake warning light switch	55	T6 — six-point, on dashboard cluster
Defogger cut-out relay (X-contact)	63, 64	Radiator fan	121	T8 — eight-point, on transmission
Door contact/buzzer switch, left	51, 52	Radio connection	72	T14 — fourteen-point, on dashboard cluster
Door contact switch, front right	50	Rear window defogger switch	124	
Dual brake & parking brake warning light	55	Rear window defogger switch light	122	
Electric fuel pump	23	Rear window defogger warning light	123	
Emergency flasher relay	89, 90	Rear window heater element	125	
Emergency flasher switch	88-91	Seat belt buzzer contact, left	53	
Emergency flasher warning light	93	Seat belt system warning light	54	
Engine oil pressure control unit	33, 34	Seat belt warning system relay	52-54	
Engine oil pressure switch (1.8 bar)	60	Shift indicator	30	
Fresh air blower series resistance	102	Shift indicator switch	61	
Fresh air fan	103	Spark plugs	11-13	
Fresh air fan switch	102	Spark plug connectors	11-13	
Fuel gauge	41	Starter	5-7	
Fuel gauge sending unit	24	Tachometer	32	
Fuel-injection system power supply relay	17-19	Tail light, left	85	
Fuel pump relay	19-23	Tail light, right	84	
Fuses (S1-S20, S22) on fuse/relay panel		Thermo time switch	27	
Hall generator	9, 10	Transistorized ignition control unit	8-11	
Headlight dimmer/flasher switch	76	Turn signal light, front left	94	
Headlight high beam warning light	38	Turn signal light, front right	96	
Headlight, left	77, 80	Turn signal light, rear left	95	
Headlight, right	78, 81	Turn signal light, rear right	97	
Headlight switch light	101	Turn signal switch	90	
High beam, left	79	Turn signal warning light	40	
High beam, right	82	Up-shift control light	31	
Horn button	120	Up-shift indicator control unit	30-33	
Horn, dual	116	Up-shift/indicator solenoid shut-off	30	
Horn relay, dual horn	118-120	Vacuum switch/up-shift indicator	62	
		Voltage regulator	1, 2	
		Voltage stabilizer	41	
		Washer/wiper intermittent relay	107-109	
		Windshield washer pump	110	
		Windshield-wiper intermittent switch	107-109	
		Windshield wiper motor	105-106	



Ground Connectors

- ① — battery/body/transmission
- ⑧ — on cold start valve
- ⑩ — on-fuse/relay panel
- ⑬ — steering gear
- ⑭ — roof member center
- ⑮ — on wiring harness front
- ⑯ — in dashboard wiring harness (wrapped with tape)
- ⑰ — rear panel

Main wiring diagram – Cabriolet 1985, 1986
page 2 of 5

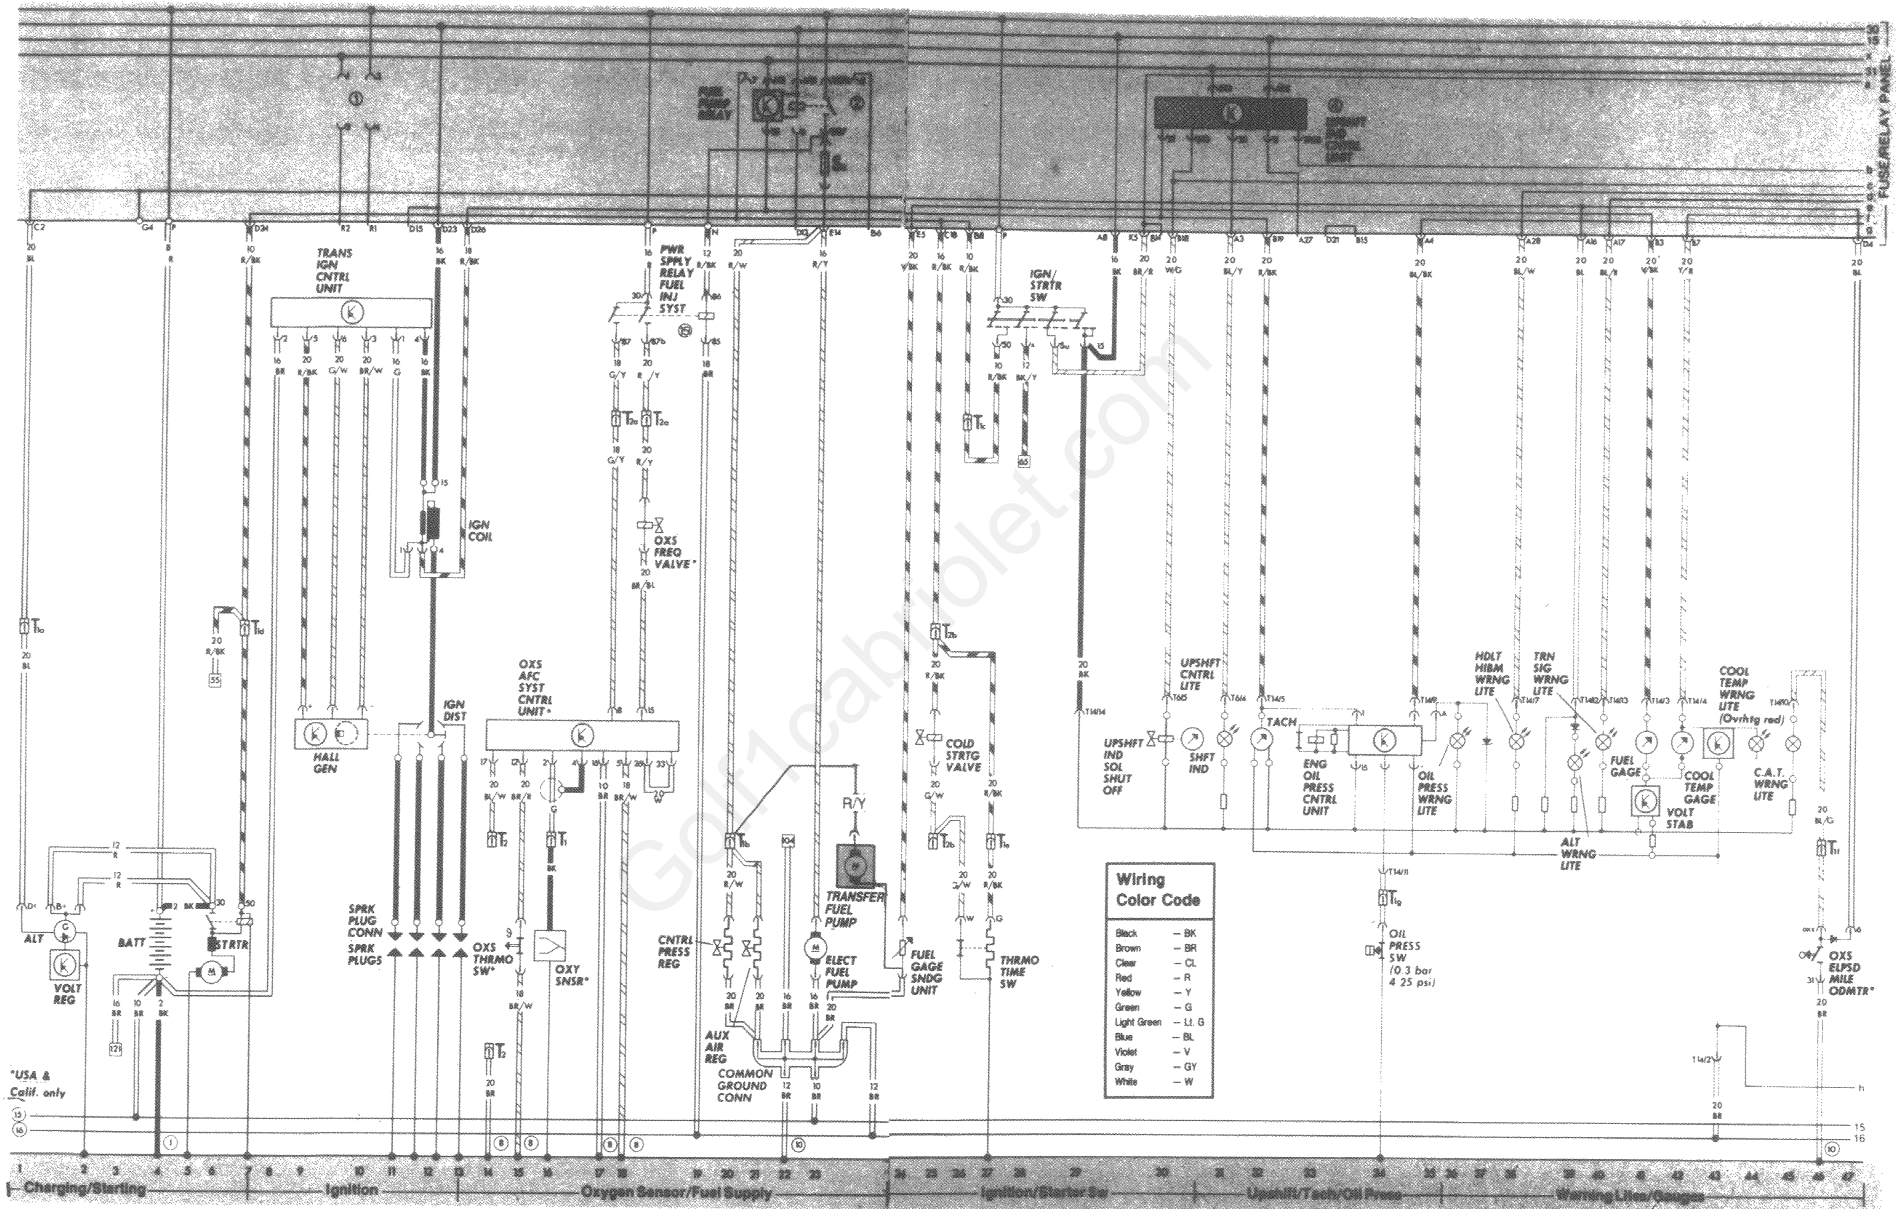


Main wiring diagram – Cabriolet 1985, 1986
page 4 of 5

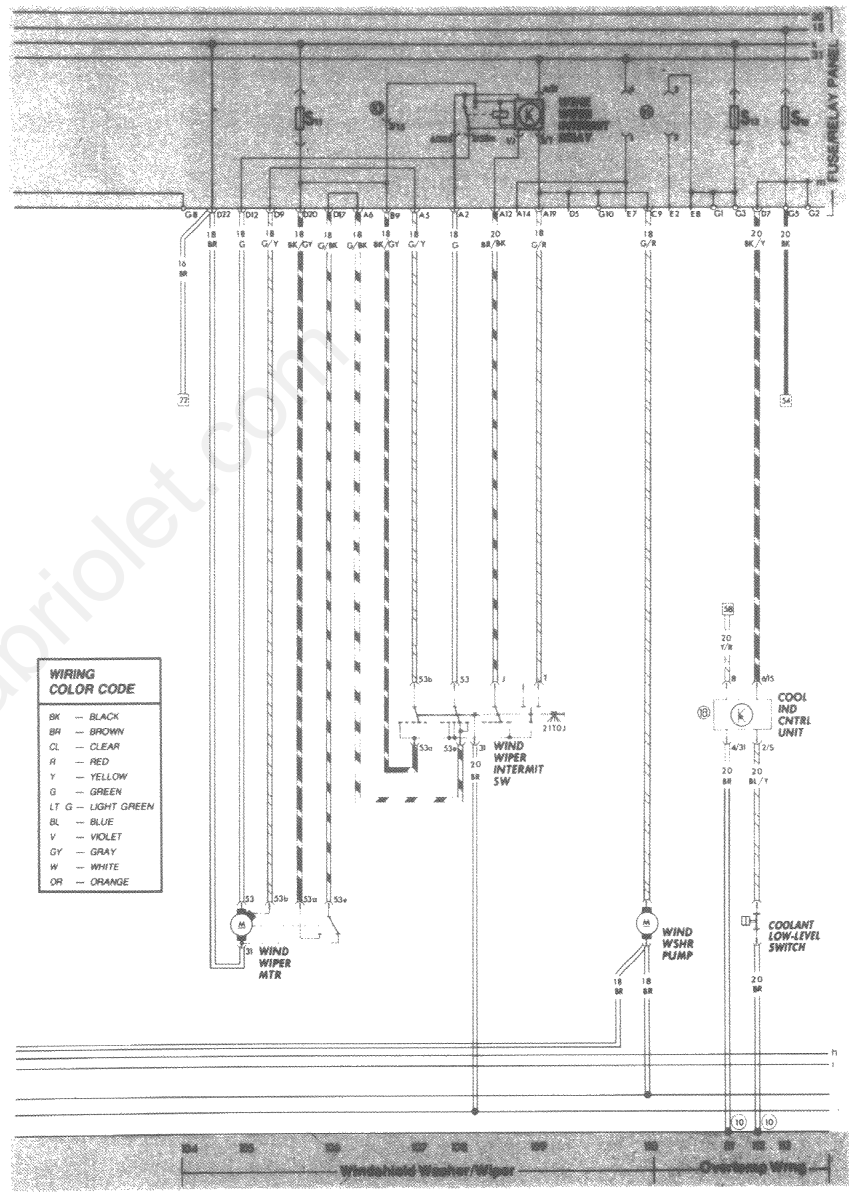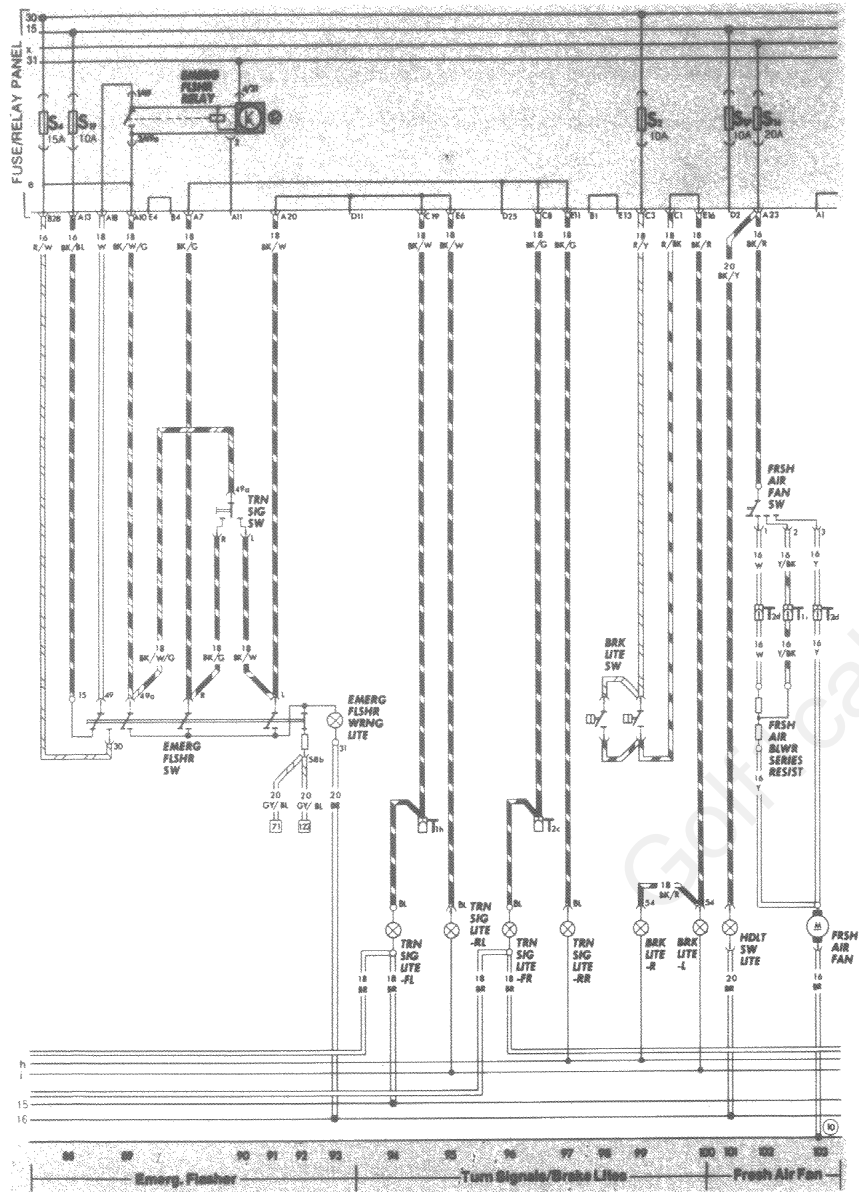

Main wiring diagram – Cabriolet 1985, 1986

page 5 of 5

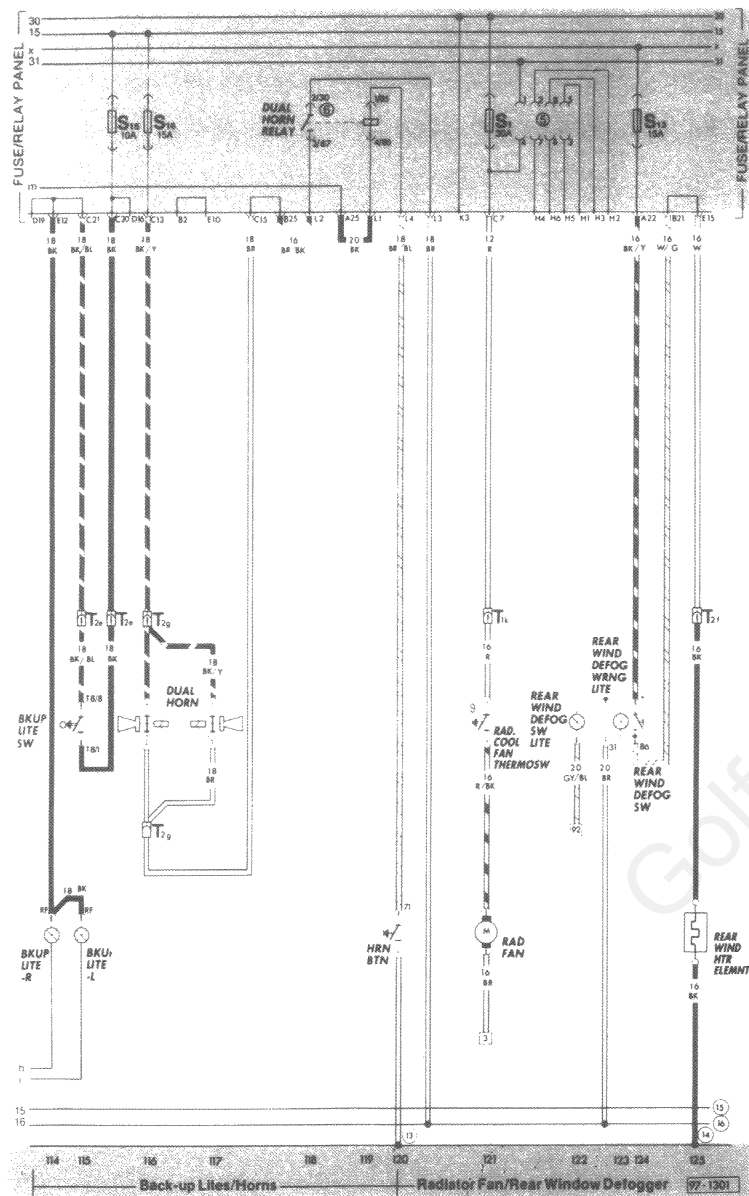

Wiring Color Code

Black	— BK
Brown	— BR
Clear	— CL
Red	— R
Yellow	— Y
Green	— G
Light Green	— LG
Blue	— BL
Violet	— V
Gray	— GR
White	— W

Back-up Lites/Horns Radiator Fan/Rear Window Defogger 99-1301