


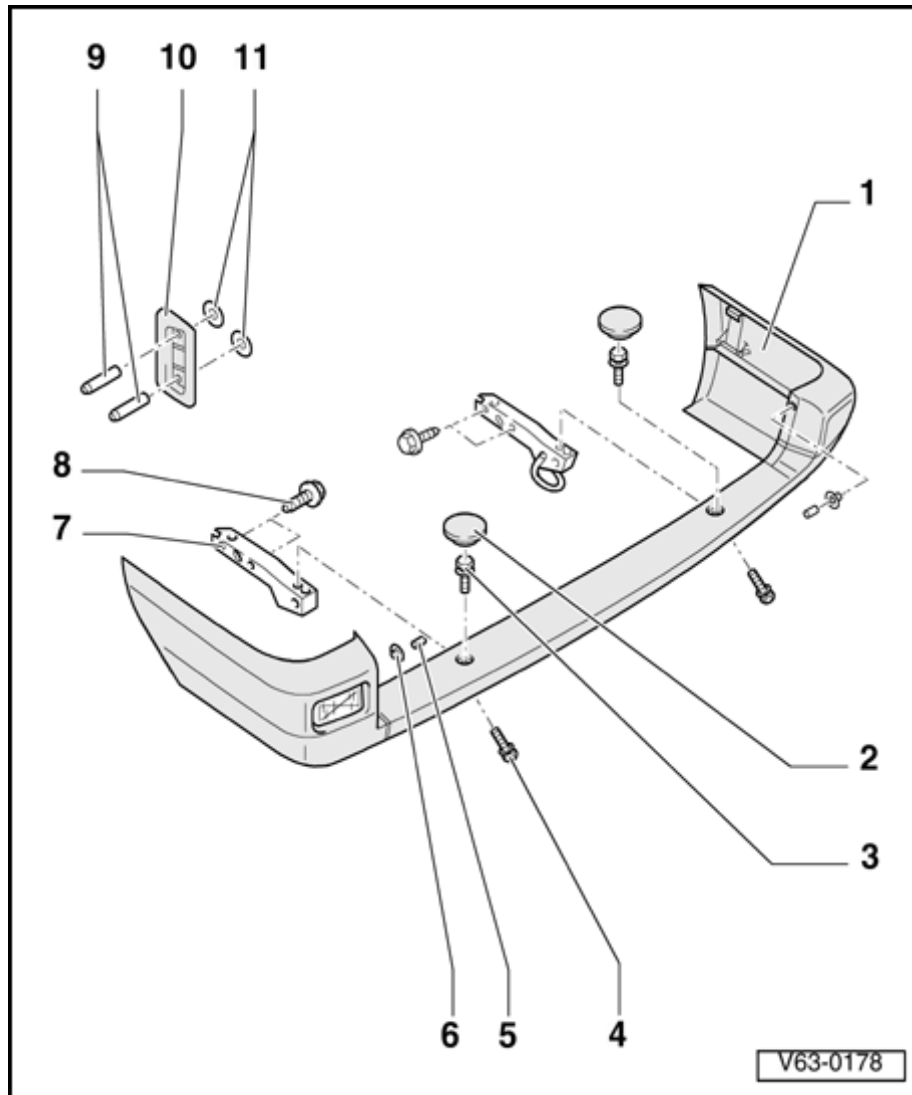

Rear bumper

Assembly overview (up to 12.95)

Rear bumper, removing and installing (from 01.96) ⇒
[Page 63-8](#)

1 - Rear bumper

2 - Cover

3 - Bolt w/washer

◆ 15 Nm (11 ft lb)

4 - Bolt w/washer


◆ 15 Nm (11 ft lb)

5 - Pin

◆ Replacement part includes -5- and -6-

6 - Expanding clip

◆ Replacement part includes -5- and -6-

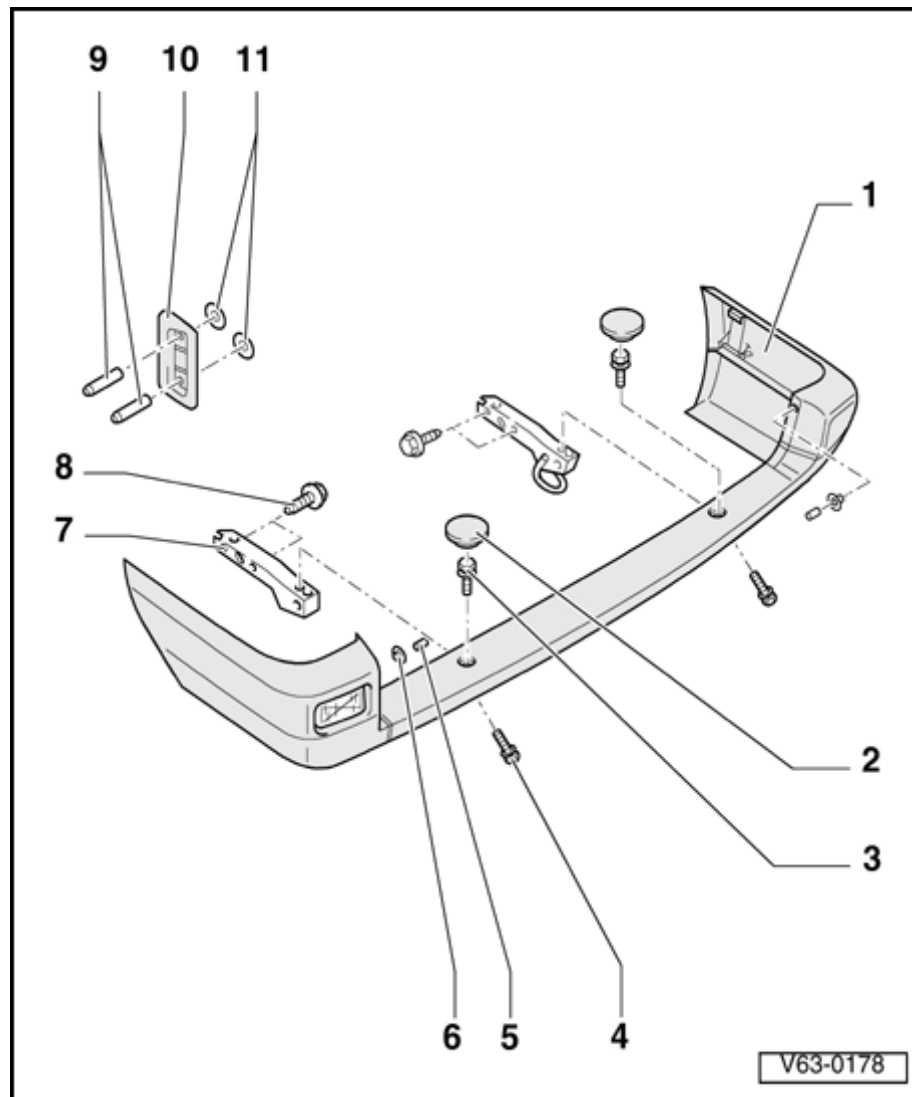

7 - Bumper bracket

8 - Bolt w/washer


◆ 110 Nm (81 ft lb)

9 - Pin

10 - Guide

◆ To remove and install, push in or slide out bumper parallel from guide (left and right)

11 - Sealing washer

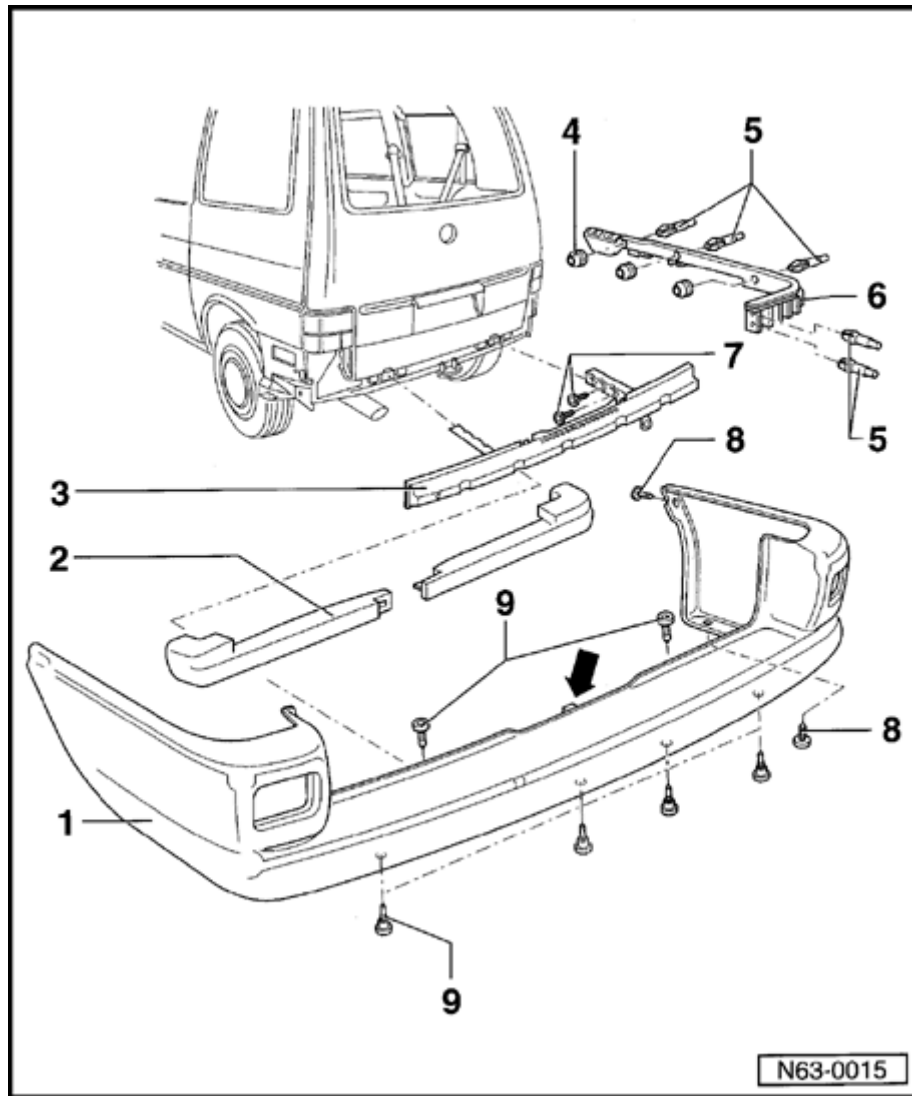

Rear bumper, removing and installing (from 01.96)

Rear bumper, removing and installing (up to 12.95) ⇒
[Page 63-6](#)

1 - Cover


- Remove torx screws -8-, hex screws -7-.
- Remove bumper with rail -3- from guides -6-.
- Remove torx screws -9-.
- Pull cover from rail with brackets -3-.

◆ Note center fastening point

2 - Bumper beam

- ◆ When removing, disconnect right side then left

3 - Rail with bracket

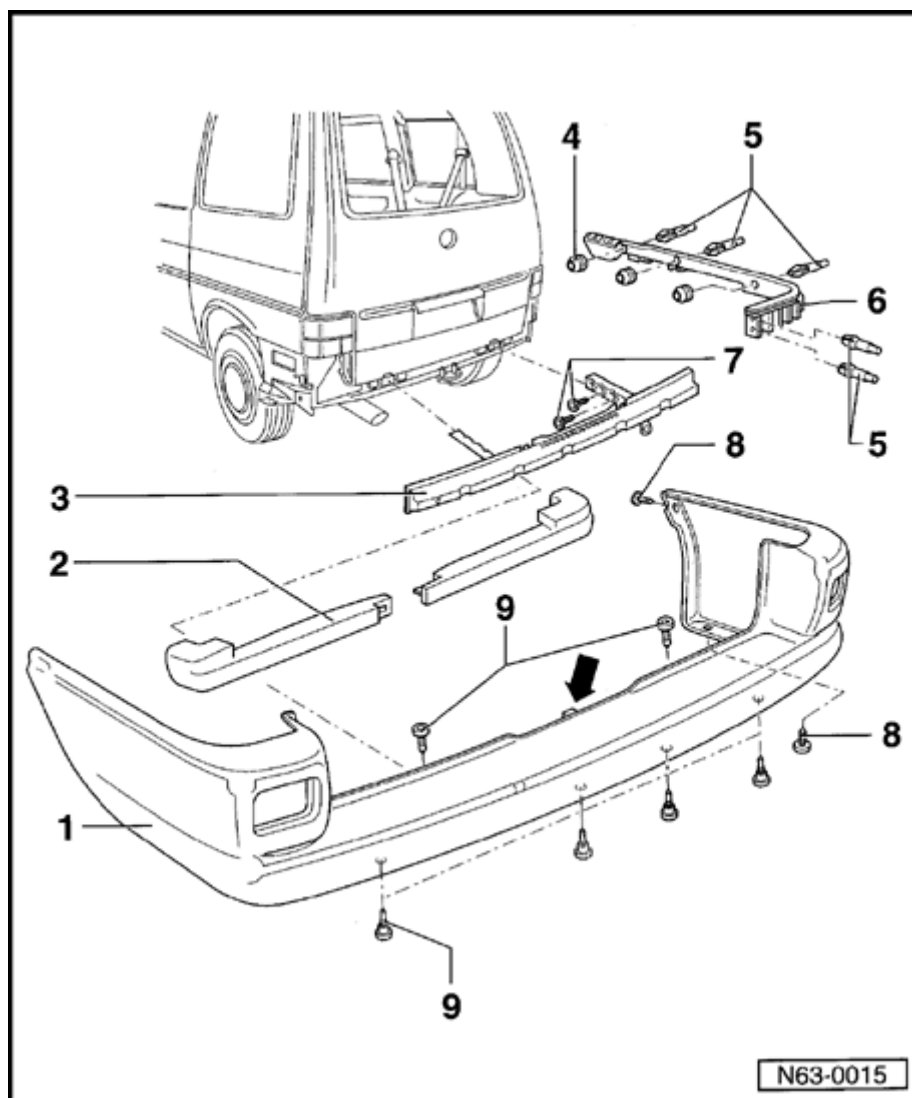

4 - Sleeve

5 - Expansion clip

6 - Bumper guide bracket

◆ To remove/install bumper beam, push/pull beam straight (parallel) out of guide bracket

7 - Hex bolt with washer

◆ 15 Nm (11 ft lb)

8 - Torx screw T25 (2x)

◆ 1.2 Nm (11 in. lb)

9 - Torx screw T30

◆ 6 Nm (53 in. lb)