


BRICKWERKS

VW T3 front panel antenna template.

- o Cut out template shape and lay over front panel.
- o Tape into place.
- o Centre punch both crosses.
- o Drill to 12mm.
- o File remainder to obtain elongated hole.
- o Prime bare metal edges.
- o Fit antenna.
- o Trim grommet to suit antenna.

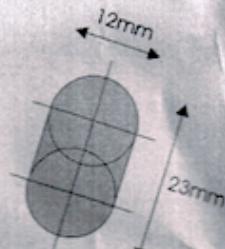

SJ Baxter Motor Engineers
Grandstand garage
Mark Street
Paddock
Huddersfield

Tel : 01484 519 800
Mob : 07979 937 292 (sensible hours only please)
Mail : Info@brickwerks.co.uk
Net : brickwerks.co.uk